



INSTRUKCIJA

Indukcinė kaitlentė

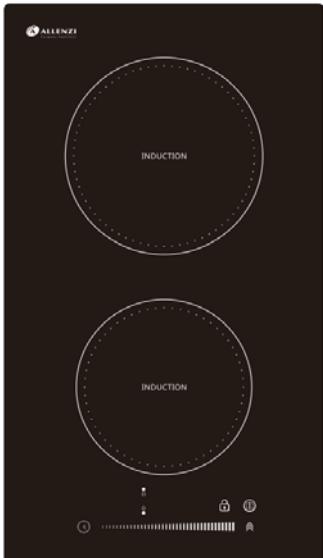

PI3020T

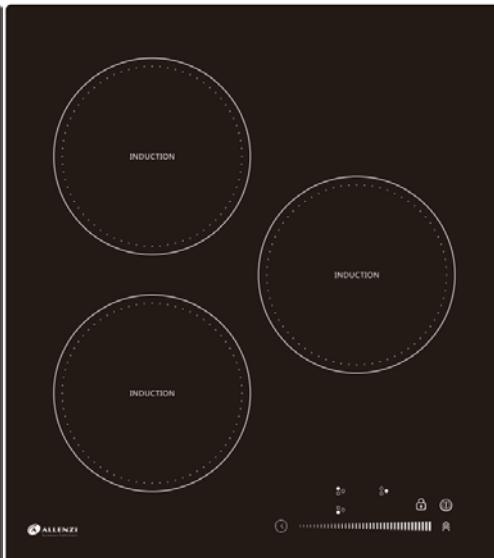

PI4030T

Prieš pradėdami naudotis perkskaitykite šią instrukciją

Saugos reikalavimai


JŪSŲ IR APLINKINIŲ SAUGUMAS YRA LABAI SVARBUS

- 1) Šiuo prietaisu negali naudotis asmenys (įskaitant vaikus), turintys fizinių, sensorinių ar protinių sutrikimų arba patirties ir žinių trūkumą, išskyrus tokius atvejus, kai jie yra prižiūrimi ir instruktuojami kitų asmenų.
- 2) **DĒMESIO:** jei paviršius jtrūko, nedelsiant išjunkite prietaisą iš elektros tinklo, kad išvengtumėte elektros smūgio.
- 3) **DĒMESIO:** nevalykite prietaiso gariniais valymo prietaisais.
- 4) Niekada nedėkite metalinių daiktų, pvz. peilių, šakučių, šaukštų arba dangčių ant kaitlentės paviršiaus, nes jie gali įkaisti.
- 5) Baigę gaminti, išjunkite kaitvietę jutikliu, nepasikliaukite tik indo detektoriumi.
- 6) Šis prietaisas nepritaikytas naudojimui su išoriniu laikmačiu ar nuotolinio valdymo sistema.
- 7) Nepalikite jokių daiktų ant veikiančios kaitlentės, nes galite sukelti gaisrą.
- 8) **ISPĖJIMAS:** Gamindami nepalikite veikiančios kaitlentės be priežiūros.
- 9) **DĒMESIO:** Niekada nepalikite be priežiūros įkaitusių riebalų ar aliejaus, nes galite sukelti gaisrą.
- 10) Jei elektros laidas pažeistas, kvieskite kvalifikuotą specialistą arba aptarnavimo centro atstovą, kad pakeistų jį.

- 11) Šiuo įrenginiu gali naudotis vaikai nuo 8 metų amžiaus, asmenys, turintys fizinių, sensorinių ar protinių sutrikimų arba nepatyrę vartotojai tik tuomet, kai yra tinkamai prižūrimi arba mokomi, kaip saugiai naudotis įrenginiu ir gerai žino visas su juo susijusias rizikas. Neleiskite vaikams žaisti su gartraukiu. Vaikai be priežiūros negali naudotis bei valyti prietaiso.
- 12) **DĖMESIO:** Prietaisas ir jo dalys jkaista naudojimo metu.
- 13) Nelieskite kaitinimo elementų.
- 14) Vaikai, kuriems mažiau negu 8 metai, negali naudotis šiuo prietaisu, išskyrus tuos atvejus, kai yra visą laiką prižūrimi.
- 15) **DĖMESIO:** Išsilieję ant kaitvietės aliejus ar riebalai gali sukelti gaisrą.
- 16) Niekada negesinkite gaisro vandeniu. Išjunkite kaitlentę ir liepsną užgesinkite dangčiu ar ugniai atspariu užklotu.
- 17) Po montavimo prietaiso laidas neturi būti paliktas lengvai prieinamoje vietoje.

Irengimas

Žemiau yra nurodyti reikalingi išmatavimai montuojant kaitlentę.

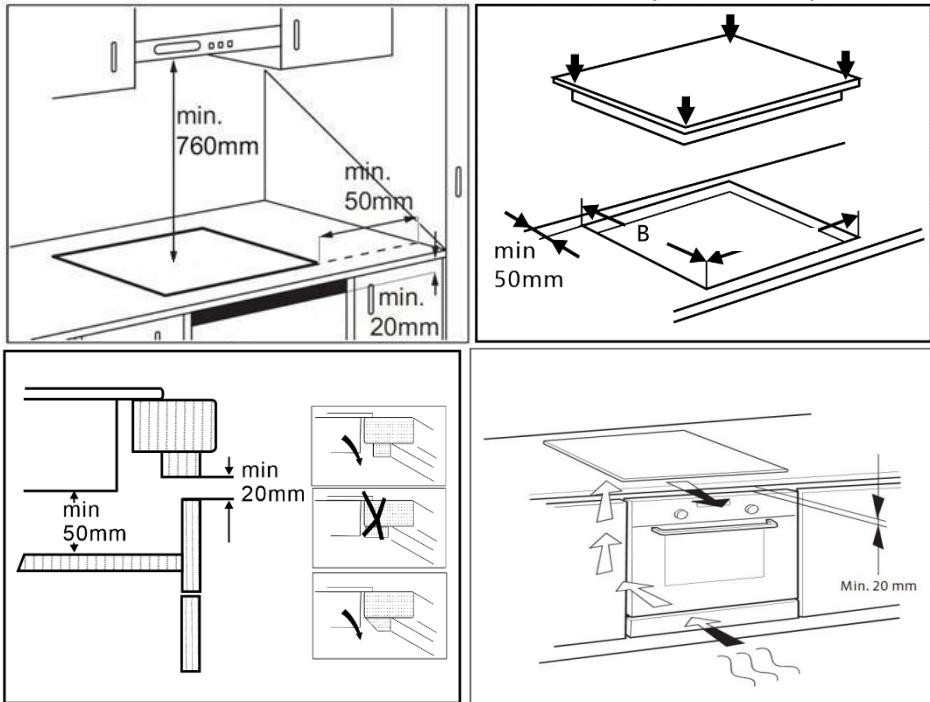

Model	A (mm)	B (mm)
PI3020T	270	480
PI4030T	430	480





- Atstumas tarp apatinės prietaiso dalies ir skiriančios plokštės turi atitikti paveikslėlyje nurodytus išmatavimus (min 50mm).
- Įsitikinkite, kad kaitlentė turi oro ventiliaciją. Po prietaisu turi būti tarpas, kad oras galėtų laisvai cirkuliuoti.
- Jei kaitlentė įrengta virš orkaitės, orkaitė turi turėti aušinimo ventiliatorių.

- Nejrenkite kaitlentės virš indaplovės, šaldytuvo, šaldiklio, skalbyklės ar drabužių džiovyklės, nes drėgmė gali pažeisti kaitlentės elektroniką.
-

Tvirtinimo laikikliai:

Pritvirtinkite kaitlentę ant darbinio paviršiaus varžtais ir 4 laikikliais. Sureguliuokite laikiklio padėtį.

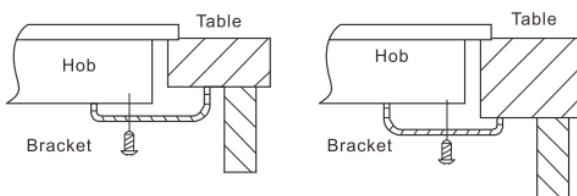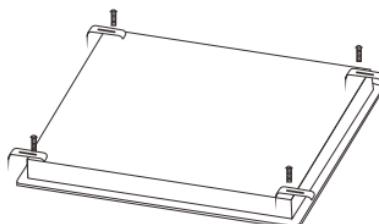

PRIJUNGIMAS PRIE ELEKTROS ŠALTINIO



Kaitlentę prie maitinimo tinklo gali prijungti tik kvalifikuotas specialistas. Įsitikinkite, kad:

1. Elektros duomenys, nurodyti techninių duomenų lentelėje, atitinka jūsų elektros tinklo duomenis.
2. Prijungdami prietaisą, nenaudokite adapterių, reduktorių ar šakotuvų. Jie gali perkaisti ir sukelti gaisrą.

PRIEŠ NAUDOJANTIS

SVARBU: Naudokite tik tuos indus, kurie pritaikyti indukcinėms kaitlentėms. Patikrinkite, ar ant indo pakuočės bei jo pačioje yra ženklas, rodantis, kad jie tinkta indukcinėms virykliams.



TINKAMI GAMINIMO INDAI

Jūs galite patikrinti su magnetu. Priartinkite jį prie indo – jei magnetą indas pritraukia, jis tinkta indukcinei viryklei.

- Įsitikinkite, kad indo dugnas yra lygus.
- Niekada nedėkite indų ant kaitlentės valdymo zonos.



- Gaminimo indo dugno skersmuo turi būti ne mažesnis kaip 10 cm.

NAUDOJIMO INSTRUKCIJA




Kad nesugadintumėte keramikos paviršiaus nenaudokite:



- Puodų su nelygiu dugnu
- Metalinių puodų su emaliuota apačia.

VALDYMO ZONA IŠ VIRŠAUS

PI3020T

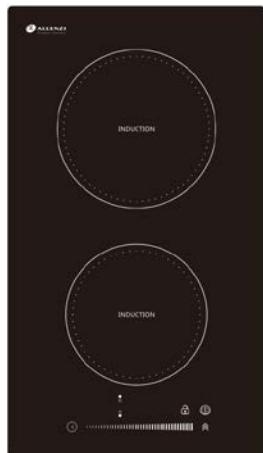

PI4030T

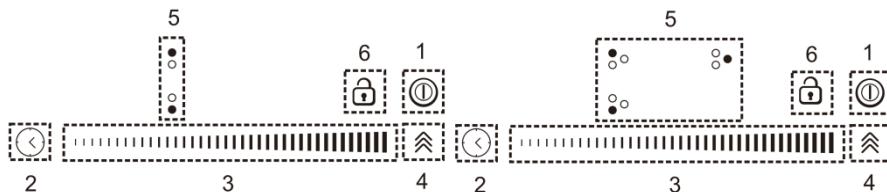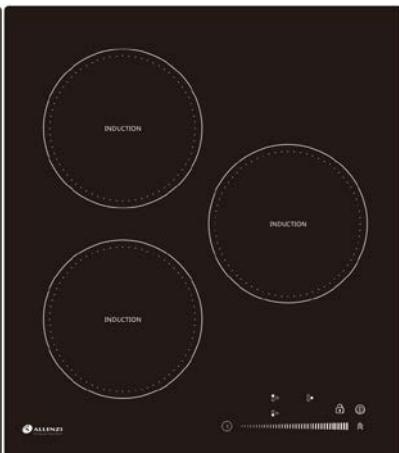

1. Ijungimas/Išjungimas
3. Galia/Laikmačio jutiklis
5. Galingumo nustatymai

2. Laikmatis
4. Funkcija "Boost"
6. Užraktas nuo vaikų

Kaitlentės įjungimas-išjungimas



- Norédami įjungti kaitlentę, paspauskite mygtuką ir pasirinkite kaitvietę.
- Jegu per 60 sekundžių įjungus nepasirinkta kaitvietė, kaitlentė išsijungia automatiškai.



Įjungimas ir kaitvietės galingumo pasirinkimas

- Kai kaitlentė yra įjungta ir keptuvė/puodas yra teisingai uždėti ant pasirinktos kaitvietės mygtuko indikatorius rodo 5 lygmenį.



- Kiekviena kaitvietė turi savo tam tikrus galingumo lygmenis, juos pakeisti naudodami slankiklio valdymą.



Vartotojas turi galimybę pasirinkti nuo 1 iki 9 lygio galingumą.

- Norédami išjungti tam tikrą kaitvietę palieskite kaitvietės slankiklio valdymą uždékite pirštą ir patraukite į kairę. Turite matyti kad kaitvietė rodo numerį "0".

Apsauga nuo vaikų



- Ši funkcija užrakina valdymą nuo atsitiktinio kaitlentės įjungimo.
- Jei norite įjungti šią funkciją palieskite  ir laikykite, laikmatis turėtų rodyti "Lo", po to valdymas užsirakina.

- Norédami išjungti valdymo užraktą palieskite kaitlentę ir laikykite sensoriu  3 sekundes. Lo išsijungia ir kaitlentė vėl išjungia.

Laikmatis

- Laikmatis gali būti panaudotas ilgiausiai 99 minutes visom kaitvietėms.
- Pasirinkus kaitvietę su laikmačio  valdymu, pamatysite "10" ekranelyje, kurį palietėte, tada "0".
Pasirinkite laiką naudodamiesi slankiklio valdymą.

8.8.



- Palieskite laikmačio valdymą vėl, pamatysite "1" ekrane. Pasirinkite laiką naudodamiesi slankiklio valdymu.
- Po kelių sekundžių, laikmatis išjungia.
- Pasibaigus pasirinktos kaitvietės nustatytam veikimo laikui, pasigirsta vienas garso signalas ir kaitvietė išsijungia automatiškai.
- Norédami išjungti laikmatį, paspauskite mygtuką su  laikrodžio simboliu ir nustatykite norimą kepimo laiką "00", paliesdami slankiklio valdymą.

“Boost” funkcija

- Palietus kaitvietės pasirinkimo valdymą ir palietus boost valdymą , kaitvietės ekranėlis rodys "b" ir išsijungs didžiausias kaitvietės galingumas.
- Norédami išjungti funkciją, vėl paspauskite  ir galia bus ta pati, kaip prieš funkcijos i Jungimą.

Automatiškas išsijungimas

Kaitlentė automatiškai išsijungs jeigu nenustatėte laikmačio, arba jei pamiršote kaitlentę išjungti.

Galingumo lygiai	1	2	3	4	5	6	7	8	9
Laikmatis (valandos)	8	8	8	4	4	4	2	2	2

VALDYMO EKRANO INDIKATORIAI

Likusio karščio indikatorius



- Kaitlentė turi liekamosios šilumos indikatoriaus funkciją kiekvienai kaitvietei
- Šie indikatoriai ekrane perspėja vartotoją, kad kaitvietės dar šiltos
 - Jeigu ekranėlis rodo , tai reiškia kad kaitvietė dar šilta.
- Jeigu kaitvietės ekranas rodo H reiškia that kaitvietė gali panaudota pvz. išlaikyti patiekalą šiltą.
- Kai kaitvietė atšala, indikatorius išsijungia.

Neteisingai arba visai neuždėto indo indikatorius

- Jeigu naudojate puodą kuris netinka arba netaisyklingai uždėtas arba turi netinkančius matmenis jūsų indukcinei kaitlentei, atsiras šis indikatorius ekrane - “  ”. Jeigu per 120 sekundžių neuždėsite indo, kaitlentė išsijungs automatiškai.

TECHNINĖ INFORMACIJA

Modelis	Gaminimo zonas	Įtampa	Maks. galia	Dydis DxW(mm)	Montavimo matmenys (mm)
PI3020T	2 zonas	220-240V 50/60Hz	3500W	290 x 510	270 x 480
PI4030T	3 zonas		5800W	450 x 510	430 x 480

VALYMAS

- Nenaudokite valymo garais prietaisų.



Nenaudokite abrazyvinių medžiagų, nes galite subraižyti paviršių.

Jei stiklo paviršiuje pastebėjote įtrūkimų, iš karto išjunkite prietaisą iš maitinimo lizdo.

Nesinaudokite kaitlente, kol stiklas nebus pakeistas.

GALIMOS PROBLEMOS

Klaid os kodas	Galima priežastis	Sprendimo būdas
U	Néra puodo arba puodas netinkamas	Uždékite puodą

E1	Aukšta įtampa	Patikrinkite, ar įtampa yra normali. Ijunkite, kai maitinimo šaltinis veikia normaliai.
E2	Žema įtampa	Patikrinkite, ar įtampa yra normali. Ijunkite, kai maitinimo šaltinis veikia normaliai.
E3~E4	Nenormali temperatūra	Prašome apžiūrėti puodą. Ijunkite iš naujo, kai kaitvietė atvės.
F3~F5 F9~FA	NTC trumpas arba atviras	Paskambinkite į servisą ir nurodykite kodą

KAITLENTĖS SKLEIDŽIAMAS TRIUKŠMAS

- Kai kurie indai skleidžia garsus: traškėjimą ir pan. To priežastis gali būti indų konstrukcija (skirtingų metalų sluoksniai vibrusoja skirtinai).
- Indukcinė kaitlentė turi vidinį aušintuvą. Išjungus prietaisą, jis dar kurį laiką veikia, todėl girdisi garsas.


PRIJUNGIMAS PRIE MAITINIMO ŠALTINIO

Kaitlentės prijungimas prie maitinimo šaltinio

Kaitlentę prie maitinimo tinklo gali prijungti tik kvalifikuotas specialistas. Išsitikinkite, kad:

1. Elektros duomenys, nurodyti techninių duomenų lentelėje, atitinka jūsų elektros tinklo duomenis.
2. Prijungdami prietaisą, nenaudokite adapterių, reduktorių ar šakotuvų. Jie gali perkaisti ir sukelti gaisrą.
3. Elektros laidas neturi liestis prie įkaitusių detalių ir turi būti įrengtas taip, kad jo temperatūra neviršytų 75°C .

Pajungimo būdas:

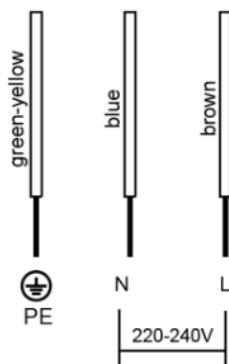

1. Jei laidas pažeistas ir turi būti pakeistas, tai turi padaryti specialistas.
2. Jei prietaisas tiesiogiai prijungtas prie elektros tinklo, jis privalo turėti kontaktinį jungiklį, kuris atjungia prietaisą nuo maitinimo tinklo ties visais poliais. Tarp kontaktinio jungiklio kontaktų turi būti ne mažesnis kaip 3 mm pločio tarpelis.
3. Laidas neturi būti sulenktas ar suspaustas.
4. Laidas turi būti reguliarai tikrinamas.
5. Jį pakeisti gali tik kvalifikuoti specialistai.




**Utilizavimas:
neišmeskite šio
prietaiso su
buitinėmis
atliekomis. Jis turi
būti pristatytas
specialiam
perdirbimui.**

Simbolis ant produkto arba jo pakuotės rodo, kad šis prietaisas neturėtų būti išmetamas kartu su buitinėmis atliekomis. Jis turi būti pristatytas į elektros ir elektronikos prietaisų surinkimo centrą perdirbimui.


Šalindami atliekas, laikykite galiojančių nurodymų. Dėl išsamesnės informacijos apie šio prietaiso utilizavimą ir perdirbimą, kreipkitės į vietos valdžios instituciją, buitinų atliekų surinkimo tarnybą arba parduotuvę, kurioje ši prietaisą pirkote.

INSTRUCTION MANUAL

INDUCTION HOB

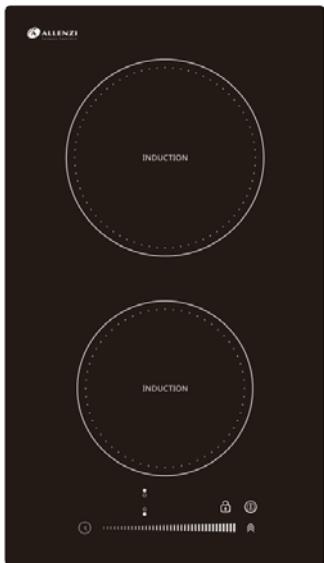

PI3020T

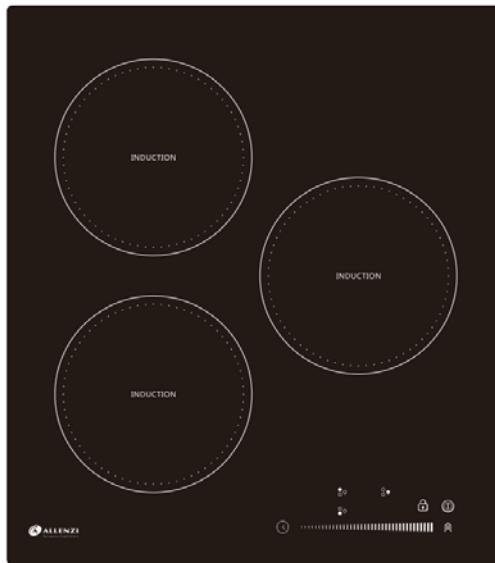

PI4030T

PLEASE READ THE INSTRUCTION MANUAL BEFORE USE

CONTENTS

SAFETY INSTRUCTIONS	17
INSTALLATION	18
ELECTRICAL CONNECTION	20
BEFORE USE	21
INSTRUCTION FOR USE	22
TECHNICAL INFORMATION	26
CLEANING	26
TROUBLESHOOTING GUIDE	27
NOISES MADE BY THE HOB	27
CONNECTING THE HOB TO THE MAIN POWER SUPPLY	28
AFTER-SALES SERVICE	30

SAFETY INSTRUCTIONS

YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT

This manual and the appliance itself provide important safety messages, to be read and always observed.



This is the warning / caution-safety symbol, regarding safety, warning of potential risks to users and other

All messages relevant to safety specify the potential risk to which they refer and indicate how to reduce the risk of injury, damage and electric shocks due to incorrect use of the appliance. Make sure to comply with the following:


- The appliance must be disconnected from the power supply before carrying out any installation operation.
- Installation and maintenance must be carried out by a specialized technician, in compliance with the manufacturer's instructions and the local safety regulations in force. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- The appliance must be earthed.
- The power cable must be long enough for connecting the appliance, fitted in the cabinet, to the power supply.
- For installation to comply with the current safety regulations, an omnipolar switch with minimum contact gap of 3mm is required.
- Do not use multi-sockets or extension cords.
- Do not pull the appliance's power cable.
- The electrical parts must not be accessible to the user after installation.
- The appliance is designed solely for domestic use for cooking food. No other use is permitted (e.g. heating rooms). The Manufacturer declines any liability for inappropriate use or incorrect setting of the controls.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years old shall be kept away unless continuously supervised.
- The accessible parts can become very hot during use. Children must be kept away from the appliance and watched over to ensure

- they do not play with it.
- Do not touch the appliance heating elements during and after use. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled sufficiently.
 - Do not place flammable materials on or near the appliance.
 - Overheated oils and fats catch fire easily. Pay attention when cooking food products rich in fat and oil.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - An air switch or circuit breaker (not supplied) should be installed in the compartment under the appliance.
 - If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
 - The appliance is not intended to be operated by means of an external timer or separate remote control system.
 - **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
 - **WARNING:** Danger of fire: do not store items on the cooking surfaces.
 - Do not use steam cleaners.
 - Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
 - After use, switch off the hob element by its control and do not rely on the pan detector.

INSTALLATION

After unpacking the product, check for any damage during transport. In case of problems, contact the dealer or the After-Sales Service.

For built-in dimensions and installation instruction, see in below figures

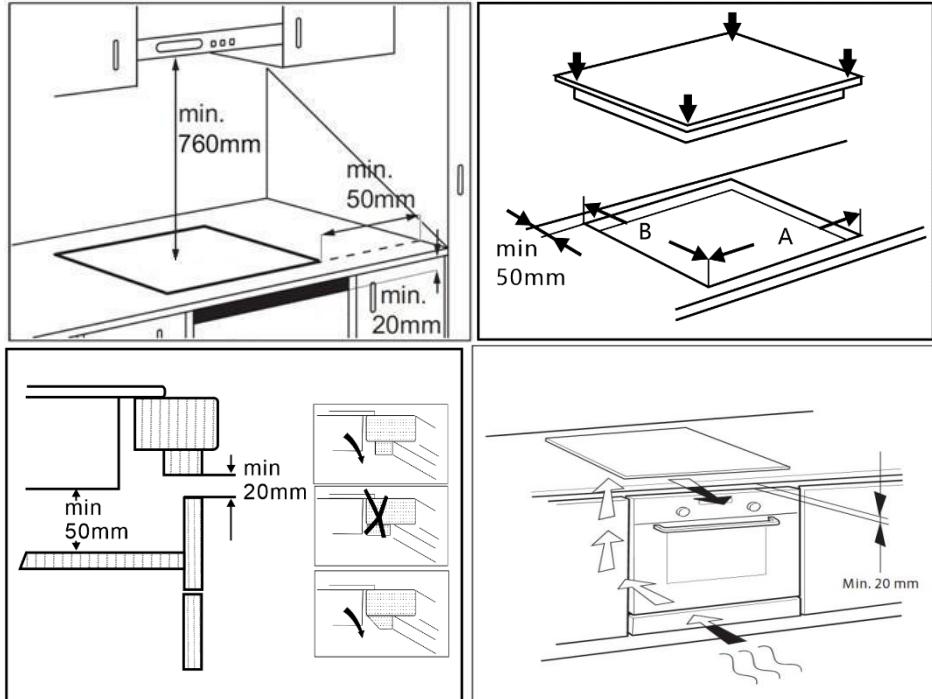


Model	A (mm)	B (mm)
PI3020T	270	480
PI4030T	430	480



- The distance between the underside of the appliance and the separator panel must respect the dimensions given in the figure (mini. 50mm).
- In order to ensure the correct operation of the product, do not obstruct the **MINIMUM REQUIRED** clearance (min. 20 mm) on the worktop for air flow out.
- If an undetop oven is installed, make sure the oven is equipped with a cooling system.
- Do not install the hob above a dishwasher or washing-machine, so that the electronic circuits do not come into contact with steam or moisture which could damage them.

Locating the fixing brackets:

The unit should be placed on a stable, smooth surface (use the packaging). Do not apply force onto the controls protruding from the hob. Fix the hob on the work surface by screw and four brackets on the bottom of hob (see picture) after installation. Adjust the bracket position to suit for different work surface's thickness.

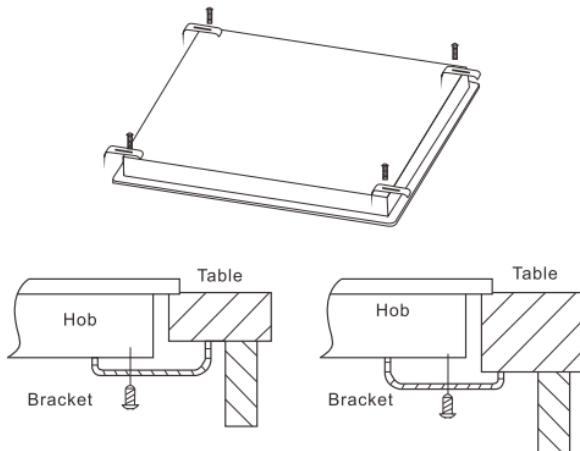

ELECTRICAL CONNECTION



- Disconnect the appliance from the power supply.
- Installation must be carried out by qualified personnel who know the current safety and installation regulations.
- The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from failure to observe the regulations provided in this chapter.
- The power cable must be long enough to allow the hob to be removed from the worktop.
- Make sure the voltage specified on the rating label located on the bottom of the appliance is the same as that of the home.

BEFORE USE


IMPORTANT: The cooking zones will not switch on if pots are not the right size. Only use pots bearing the symbol “INDUCTION SYSTEM” (Figure below). Place the pot on the required cooking zone before switching the hob on.



EXISTING POTS AND PANS

Use a magnet to check if the pot is suitable for the induction hob: pots and pans are unsuitable if not magnetically detectable.

- Make sure pots have a smooth bottom, otherwise they could scratch the hob. Check dishes.
- Never place hot pots or pans on the surface of the hob's control panel. This could result in damage.

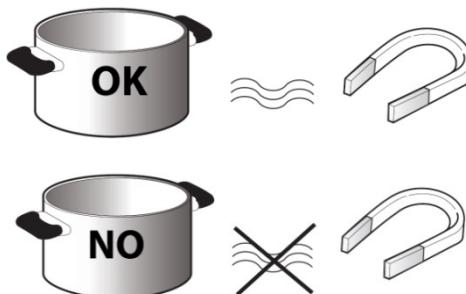

- The bottom diameter of pots or pans should be at least 10cm.

INSTRUCTION FOR USE




To avoid permanently damaging the glass-ceramic top, do not use:




- Pots with bottoms that are not perfectly flat.
- Metal pots with enameled bottom.

CONTROL PANEL LAYOUT

PI3020T

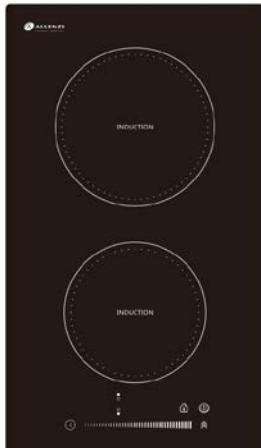

PI4030T

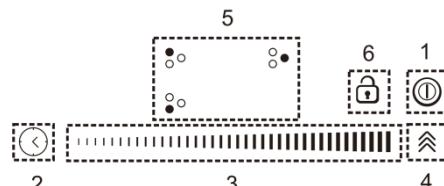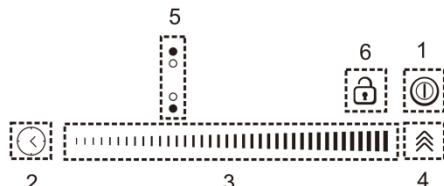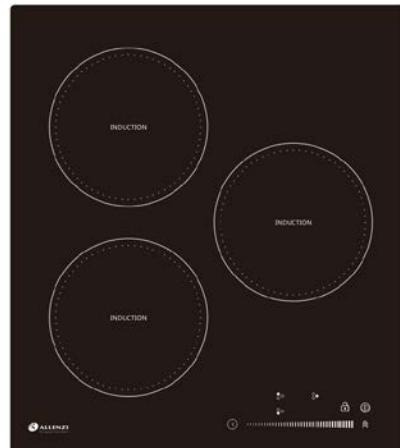

1. ON/OFF control
3. Power / Timer slider touch control
5. Heating zone selection controls

2. Timer control
4. Power boost control
6. Child safety lock

Switching the hob On/Off



- To switch the hob on, press the button and the cooking zone displays light up.
- If within 60 seconds of switching on, no heating zone is selected, the hob switches off automatically.

Switching on and adjusting cooking level

- Once the hob is switched on and the pan is positioned on the chosen cooking zone corresponding button, and the display shows level 5.



- Each cooking zone has various power levels, adjust with touching the Power/Timer regulating controls.



User can adjust power from 1-9

- Touching the heating zone selection control that you wish to switch off, and touching the slider to the left. Make sure the corresponding display of heating zone shows "0"

Child lock



- This function locks the controls to prevent accidental switching on of the hob.
- To activate the child lock function, touch on the hob and hold button ; the timer shows "Lo", then the control panel is locked.
- To deactivate the control panel lock, touch on the hob

and hold button  for three seconds. The Lo goes off and the hob is active again.

Timer

- The timer can be used to set cooking time for a maximum of 99 minutes for all cooking zones.
- Select the cooking zone to be used with the timer, Touch timer control  , the “10” will show in the timer display where touched. and the “0” flashes. Set the time by touching the slider control.



- Touch timer control again, the “1” will flash. set the time by touching the slider control.
- After a few seconds, the timer begins the countdown.
- Once the setting time of selected heating zone expires, one acoustic signal sounds and the burner switch off automatically.
- To deactivate the timer, press the button with the clock symbol  , and set the desired cooking time to “00” by touching the slider control.

Boost function

- Touching the heating zone selection control, and touching the boost control  ,the zone indicator show “b” and the power reaches Max.
- To deactivate the power boost function, switch on  again, and the display will remain the previous power level set before this function.

Auto switch off

The hob will automatically switch off when you did not set cooking time, forgot to switch off the hob, and did not operate the hob at all.

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2

CONTROL PANEL WARNINGS

Residual heat indicator



- The hob is fitted with a residual heat indicator for each cooking zone.
- These indicators alert the user when cooking zones are still hot.
- If the display shows , the cooking zone is still hot.
- If the residual heat indicator of a given cooking zone is lit, that zone can be used, for example, to keep a dish warm or to melt butter.
- When the cooking zone cools down, the display goes off.

Incorrect or missing pot indicator

- If you are using a pot that is not suitable, not correctly positioned or not of the correct dimensions for your induction hob, the message “ ” will appear in the display, If no pot is detected within 120 seconds, the hob switches off.

TECHNICAL INFORMATION

Model	Cooking Zones	Supply Voltage	Max Power	Product Size DxW(mm)	Built-in Dimensions (mm)
PI3020T	2 Zones	220-240V 50/60Hz	3500W	290 x 510	270 x 480
PI4030T	3 Zones		5800W	450 x 510	430 x 480

CLEANING



- Do not use steam cleaners.
- Before cleaning, make sure the cooking zones are switched off and that the residual heat indicator ("H") is not displayed.

IMPORTANT: Do not use abrasive sponges or scouring pads. Their use could eventually ruin the glass.

- After each use, clean the hob (when it is cool) to remove any deposits and stains due to food residuals.
- Sugar or foods with a high sugar content damage the hob and must be immediately removed.
- Salt, sugar and sand could scratch the glass surface.
- Use a soft cloth, absorbent kitchen paper or a specific hob cleaner (follow the Manufacturer's instructions).

TROUBLESHOOTING GUIDE

- Read and follow the instructions given in the section “Instructions for use”.
- Check that the electricity supply has not been shut off.
- Dry the hob thoroughly after cleaning it.
- If, when the hob is switched on, alphanumeric codes appear on the display, consult the following table for instructions.
- If the hob cannot be switched off after using it, disconnect it from the power supply.

Error code	Possible Cause	Remedy
<u>U</u>	No Pan or did not detect the pan	Put on the pan
E1	High voltage	Please inspect whether power supply is normal. Power on after the power supply is normal.
E2	Low voltage	Please inspect whether power supply is normal. Power on after the power supply is normal.
E3~E4	Abnormal temperature.	Please inspect the pot. Please restart after the hotplate cools down.
F3~F5 F9~FA	NTC short or open	Call the after-sales service and specify the error code

NOISES MADE BY THE HOB

- Induction hobs can make whistling or crackling sounds during normal operation, these actually come from the pots and pans as a result of the characteristics of the bottoms (for example, bottoms made of several layers of material, or uneven bottoms).
- These noises vary depending on the pots and pans used and the amount of food they contain, and are not indicative of a defect of any kind.
- In addition, the induction hob is equipped with an internal cooling system to control the temperature of electronic parts; as a result,

- during operation and for several minutes after the hob has been switched off, the noise of the cooling fan will be audible.
- This is perfectly normal and indeed essential for proper functioning of the appliance.

CONNECTING THE HOB TO THE MAIN

POWER SUPPLY

This hob must be connected to the mains power supply only by a suitably qualified person.


Before connecting the hob to the mains power supply, check that:

1. The domestic wiring system is suitable for the power drawn by the hob.
2. The voltage corresponds to the value given in the rating plate.
3. The power supply cable sections can withstand the load specified on the rating plate.


To connect the hob to the mains power supply, do not use adapters, reducers, or branching devices, as they can cause overheating and fire.

The power supply cable must not touch any hot parts and must be positioned so that its temperature will not exceed 75°C at any point.

The power supply should be connected in compliance with the relevant standard, or a single-pole circuit breaker. The method of connection is shown below.

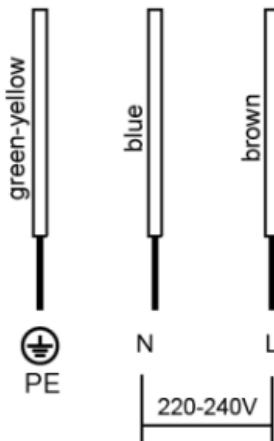

6. If the cable is damaged or needs replacing, this should be done by an after-sales technician using the proper tools, to avoid any accidents.
7. If the appliance is being connected directly to the mains supply, an omnipolar circuit breaker must be installed with a minimum gap of 3mm between the contacts.
8. The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
9. The cable must not be bent or compressed.
10. The cable must be checked regularly and only replaced by a qualified person.

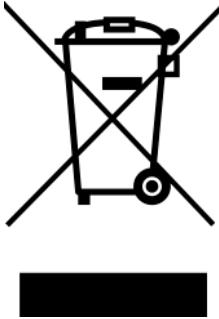

DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

A symbol on the product or its packaging indicates that this product should not go into household waste. It must be taken to the collection point of an electric and electronic equipment recycling facility. By making sure this product is disposed of properly, you will help prevent the negative effects on the environment and human health that would otherwise result from inappropriate disposal of this product. You can learn more about recycling this product from your local authorities, a household waste disposal service or in the shop where you bought this product.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

AFTER-SALES SERVICE

Before contacting the After-sales Service:

1. See if you can solve the problem yourself with the help of the "Troubleshooting guide".
2. Switch the appliance off and then on again it to see if the problem has been eliminated.

If the problem persists after the above checks, contact the nearest After-Sales Service.

Always specify:

- a brief description of the fault
- the product type and exact model
- your full address
- your telephone number

If any repairs are required, contact an authorized After-Sales Service Centre (to ensure the use of original spare parts and correct repairs). Spare parts are available.

Energy saving

For optimum results, it is advisable to:

- Use pots and pans with bottom width equal to that of the cooking zone.
- Only use flat-bottomed pots and pans.
- When possible, keep pot lids on during cooking.
- Use a pressure cooker to save even more energy and time.
- Place the pot in the middle of the cooking zone marked on the hob.